


# Remote Display Quick Start

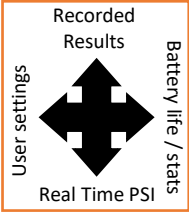

## Joystick Functions

Long Press to record.  
Click to advance to next record

Freezes, glitches, UFO's –  
press the reset button.

Hydrant LED light  
flashes  
when data  
is received

Power  
switch

Magnetic USB  
charger connector



Last recording  
Current recording

Joystick switches  
display function

# Remote Display Quick Start

User Guide at [Brandco.io/display](http://Brandco.io/display)  
Need Support? [www.Brandco.io/contact](http://www.Brandco.io/contact)

## Real Time Pressure

- Once a Sender connects to the display it will show its real time data.
- Up to three Senders can be used with the display at a time.
- If communication with a Sender is lost for 3sec, the display will show Lost Comm in its place.

## Results / Recordings

- Press up on the joystick to see page 1 of records (0 - 4).
- Press up again to see page 2 of records (5 - 9).
- Press up to toggle between pages.

**TIP:** Take a picture of results for safekeeping, they are not saved after power off



## Battery Life / Session Stats

- Press right on the joystick to see battery life for the display and all connected Senders.
- Press right again to view session stats such as max pressure, flow or gallons used.
- Press right to toggle between views.

## Menu

- Press left on the joystick to access the menu for settings.
- Center press the joystick in to select an option or a field.
- Use up/down or left/right to change values and press center when complete.
- To exit scroll to the menu bottom and choose Exit. To exit without saving press reset button.