


# Fire Pump Sender Quick Start

Full User Guide at [Brandco.io/pump](http://Brandco.io/pump)  
Need Support? [www.Brandco.io/contact](http://www.Brandco.io/contact)

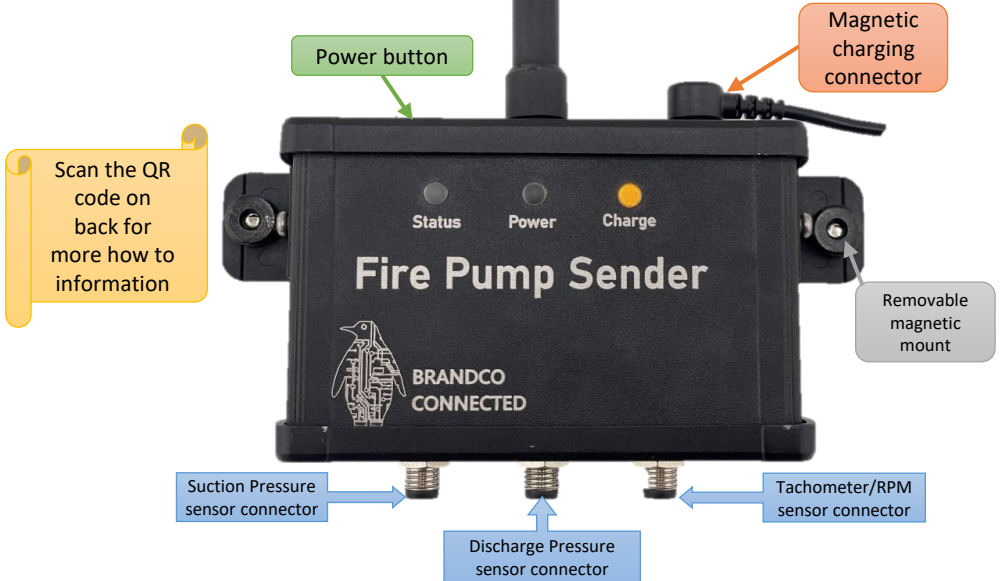

# Fire Pump Sender Quick Start

## Status Lights

- POWER will light **green** when it is turned on.
- STATUS will flash **blue** during normal operation each time data is sent.
- CHARGING will light **orange** while it is charging and turn off when it is fully charged.
- TIP: Use the Remote Display to view battery life by clicking right on the joystick.

## Pressure Sensors

- Suction sensor range: -15 – 215 psi
  - Connect to suction pressure gauge outlet.
- Discharge sensor range: 0 – 500 psi
  - Connect to discharge pressure gauge outlet.

## Tachometer

- Measuring range: 0 – 6000 rpm
- Distance: 1 – 6 feet
- Yellow indicator light is **on** when no reflection is detected.
- Ensure yellow light turns off when laser dot is on reflective tape to get RPM reading.
- Attach mag mount to surface that will not vibrate during operation.

## Troubleshooting

- STATUS light blinks red slowly at startup
  - The pressure sensor is not detected. Check your sensor cord for damage.
- STATUS flashes yellow at startup – battery is too low.

Full User Guide at [Brandco.io/pump](https://brandco.io/pump)