

# Stream Sender Quick Start

### **Status Lights**

- POWER will light green when it is turned on.
- STATUS will flash blue during normal operation each time data is sent.
- CHARGING will light orange while it is charging and turn off when it is fully charged.
- TIP: Use the Remote Display to view battery life by clicking right on the joystick.

#### **Pressure Sensors**

- Pressure sensor range: 0 100 psi
  Connect to velocity flow pressure gauge outlet.
- Pressure sensors are labeled 1 to 4 and connect to the corresponding sensor connector.

### Mounting

- Use the included magnetic feet to attach to a metallic object.
- If attaching directly to a diffuser, use the included vibration dampers in between the magnet and mounting tab on the unit.

## Troubleshooting

- STATUS light blinks red slowly at startup – The pressure sensor is not detected. Check your sensor cord for damage.
- STATUS flashes yellow at startup battery is too low.

Full User Guide at Brandco.io/stream