


# Pressure Sender Mini

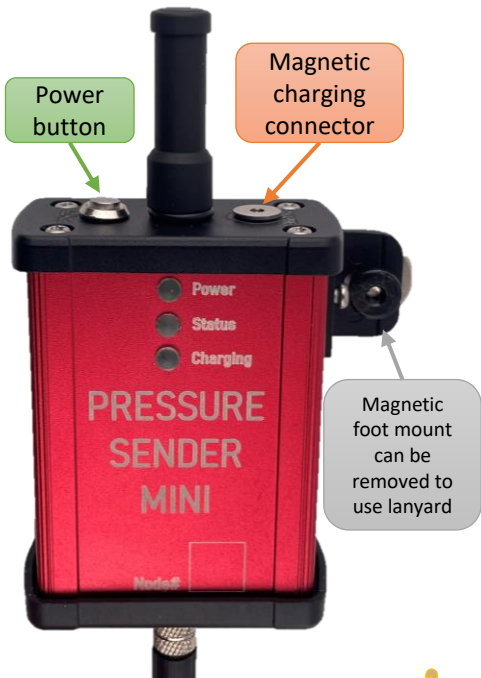

# Pressure Sender Mini

## Status Lights

- POWER will light **green** when it is turned on.
- STATUS will flash **blue** during normal operation each time data is sent.
- CHARGING will light **orange** while it is charging and turn off when it is fully charged.
- *TIP: Use the Remote Display to view battery life by clicking right on the joystick.*

## Trouble shooting

- STATUS light blinks red slowly at startup – The pressure sensor is not detected. Check your sensor cord for damage.
- STATUS flashes yellow at startup – battery is too low.